

PREPARING THE TREATMENT

 
1 Job selection

From the Spraying Menu, press key and hold to select spraying job.




2 Reset total counters

From the Spraying Menu, press key and hold to select spraying job.




3 Tank Filling

 From the Spraying Menu, press to select the value to be set.




USE


1 Automatic treatment control

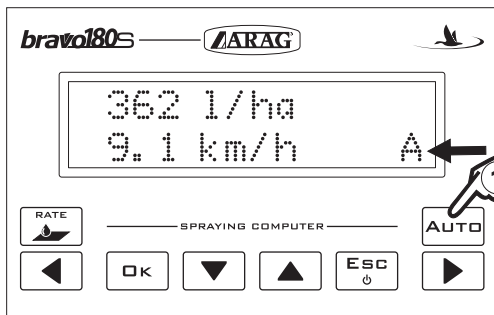


- 1 Press to enable automatic mode.
- 2 Turn on the section valves required.
- 3 Drive to the start of the field.
- 4 Set the main control switch up.
- 5 Run the treatment.

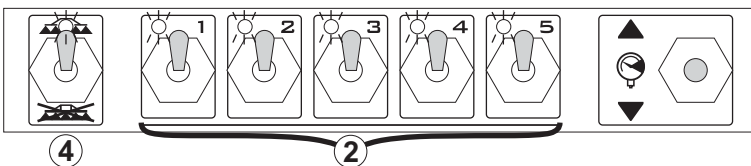

2 Temporary variation in rate

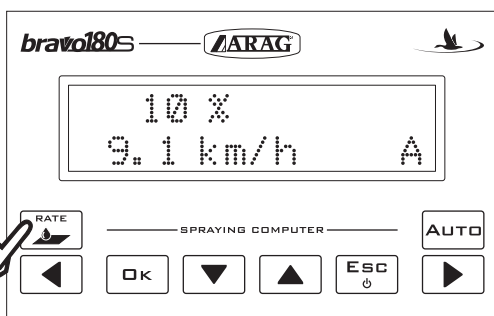

- 1 Press the switch up to increase the delivery value.
- 2 Press the switch down to decrease the delivery value.
- 3 Press to reset the rate variation percentage.

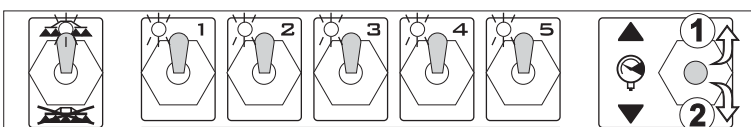

KEY TO ITEMS ON DISPLAY

Percentage of the variation relative to the set delivery value

10 %


Delivery value during spraying

300 l/ha

Spraying disabled

Master OFF

Speed simulator active: the value is to the left of the symbol

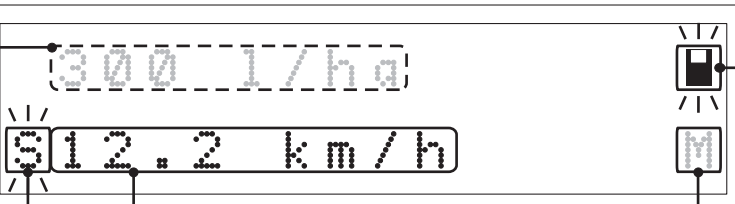

Tank level below reserve value set

 
Operating data displayed during spraying:

- Speed
- Pressure
- Flow rate
- Area
- Sprayed fluid
- Sprayed rows
- Tank level
- Time
- Distance


- A AUTOMATIC operation ON
- M MANUAL operation ON

OPERATING ALARMS


- The computer is not receiving the speed of the tractor and spraying is enabled (main control switch "ON"). The messages shown flash alternating.



 - The computer detects zero flowrate and spraying is active (main switch valve "ON"). The messages shown flash alternating.



 - Speed too high or low for the set dosage.



SELECTING THE WHEEL TYPE (CONSTANT)

From the Spraying Menu, hold down to access the User Menu.

